

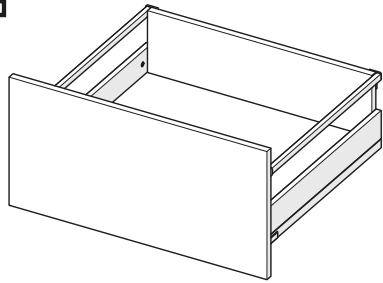
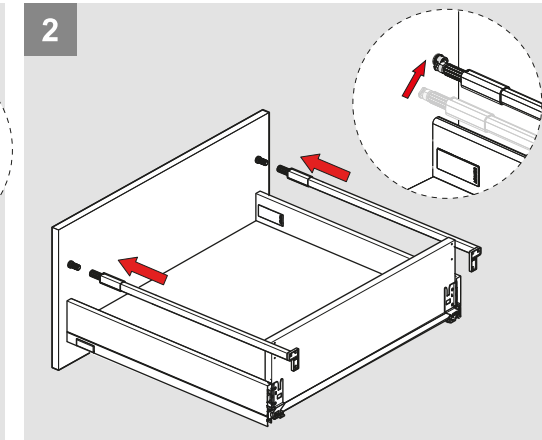


Assembly Movie

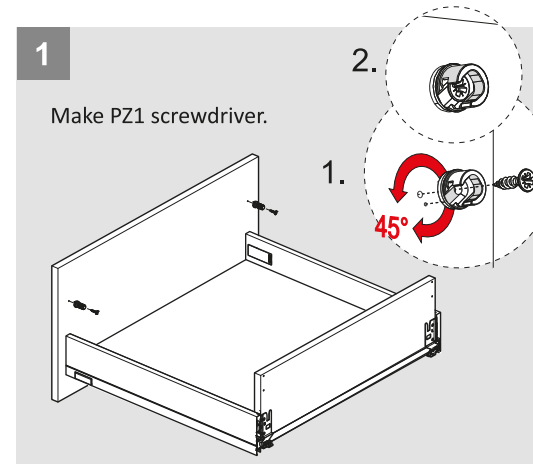


Height 58 side panel has been taken as a reference for assembly instructions.



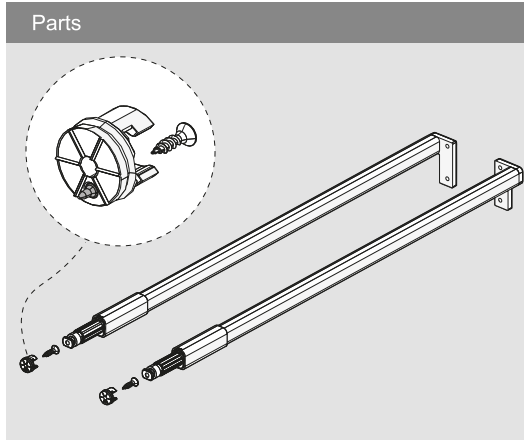


Technical Dimensions



***H:58**

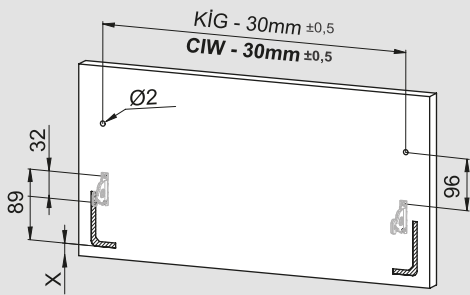


***H:144**

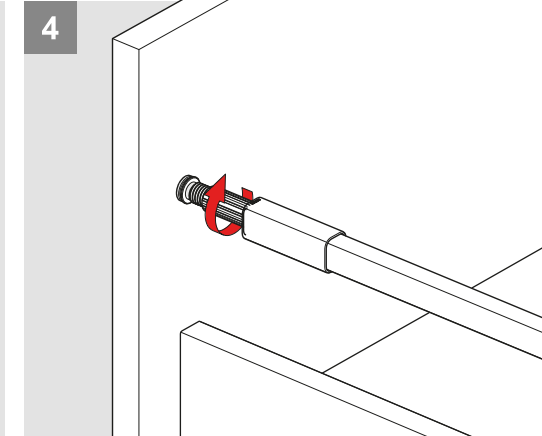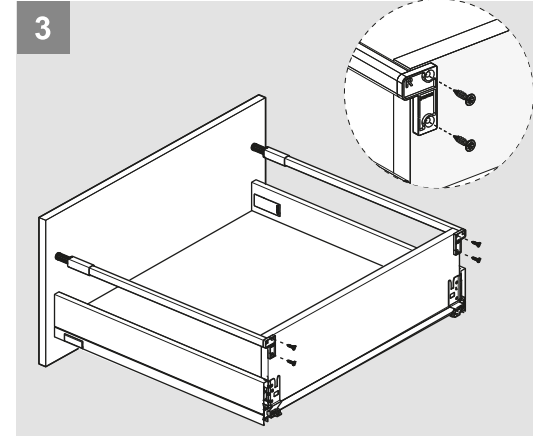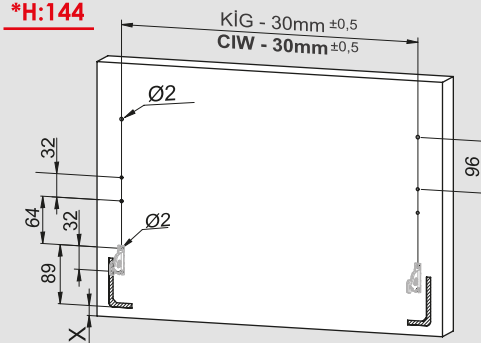


Wooden Backboard

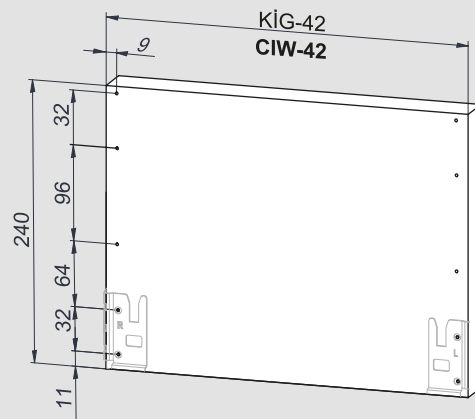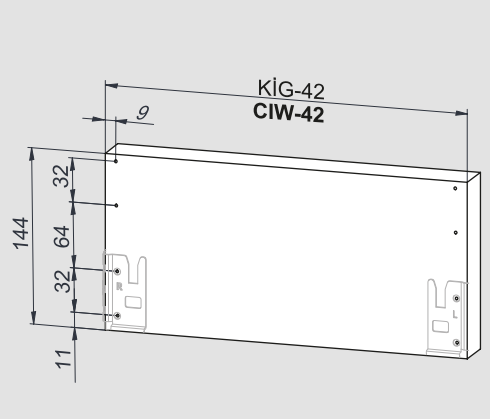

Adjustment

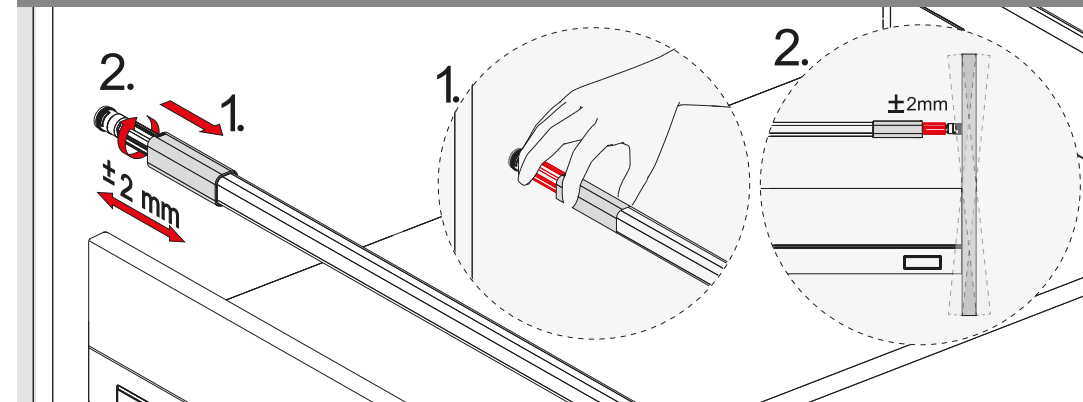


Assembly Movie

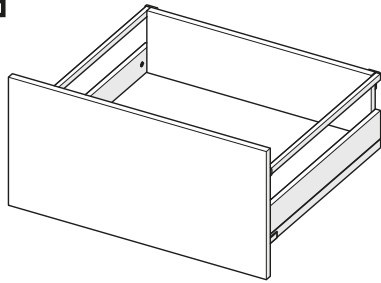


Height 58 side panel has been taken as a reference for assembly instructions.

Parts

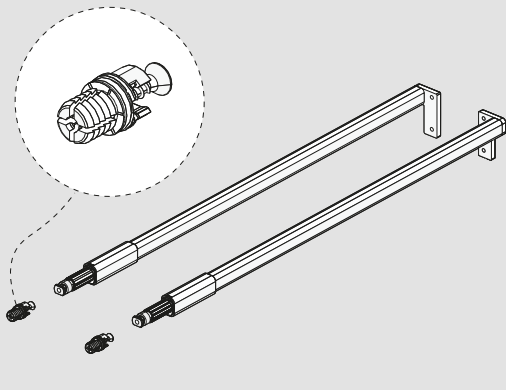


1

Make PZ2 screwdriver.

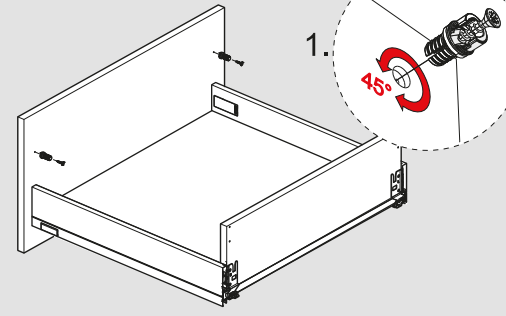


2

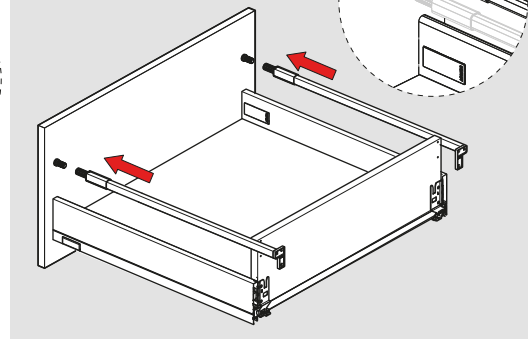


Technical Dimensions


***H:58**

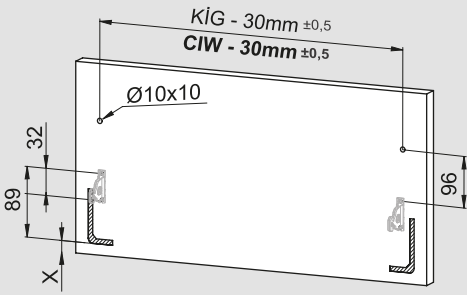


***H:144**

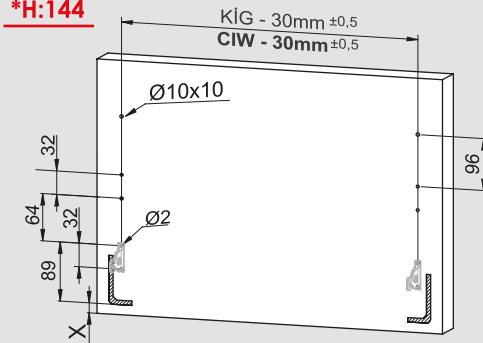



3

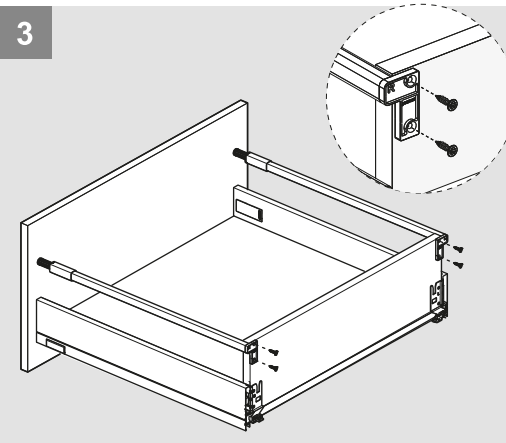

4

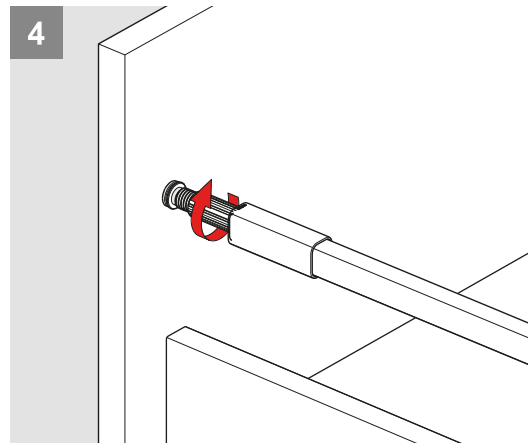

Wooden Backboard

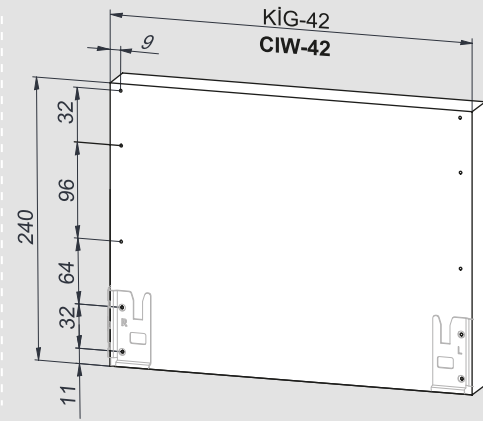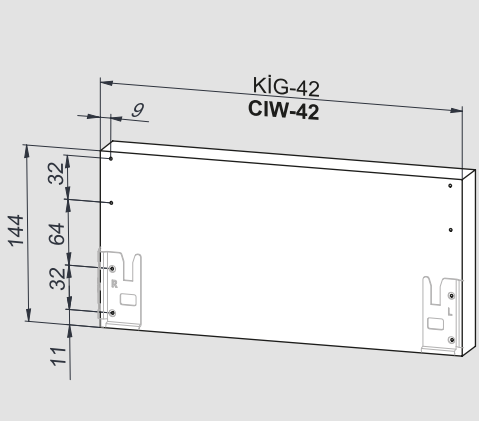

Adjustment

