




Parts

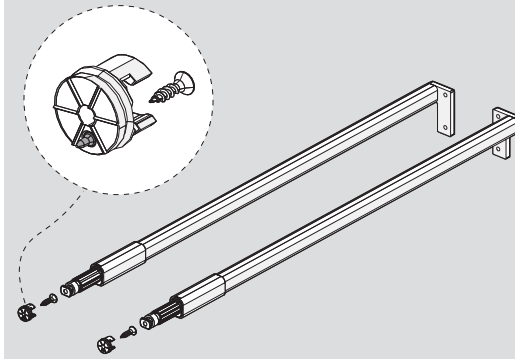

3

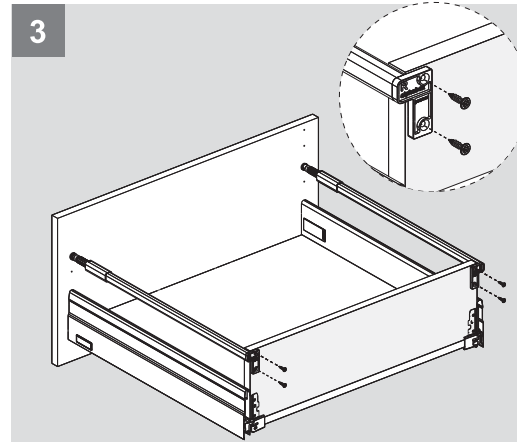


4

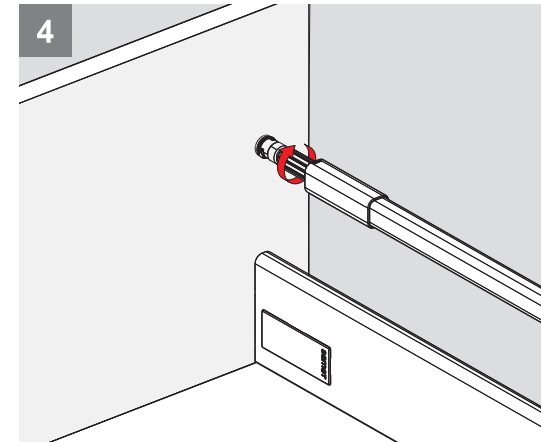


Technical Dimensions


Front Panel

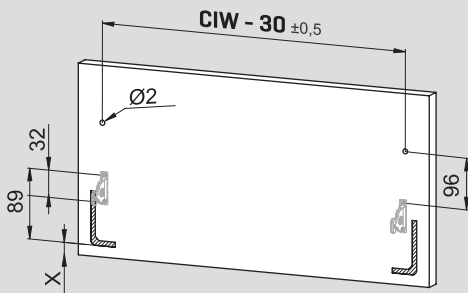


Wooden Backboard

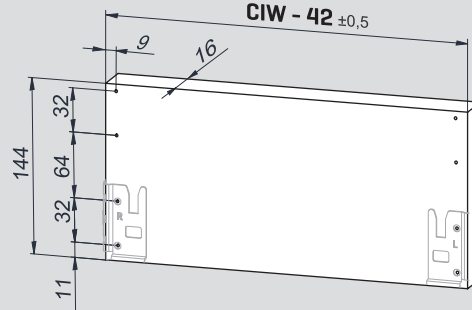

5

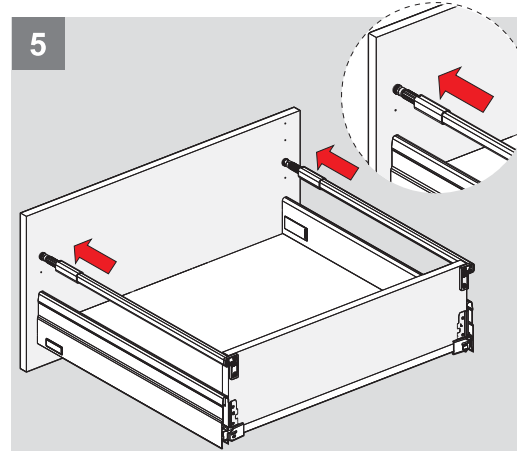


6

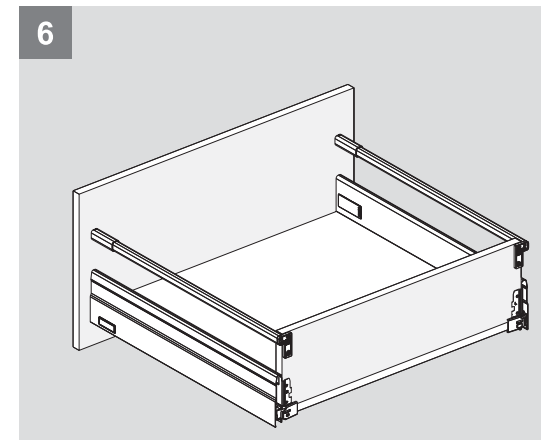


1

Make PZ1 screwdriver.


2.




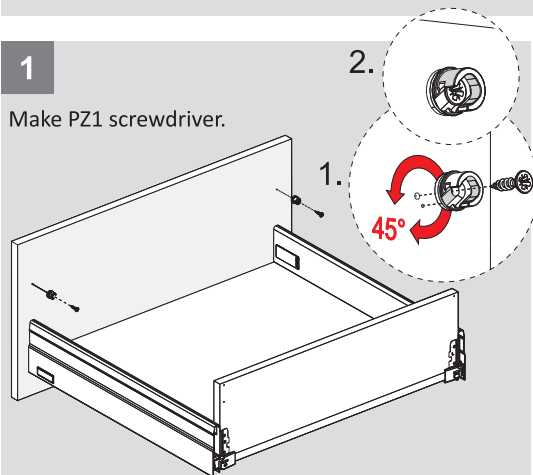


2

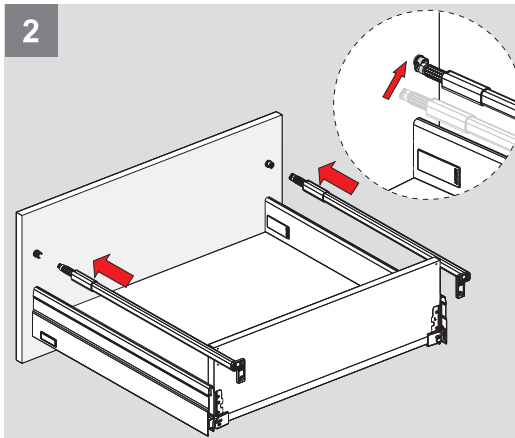


Adjustment

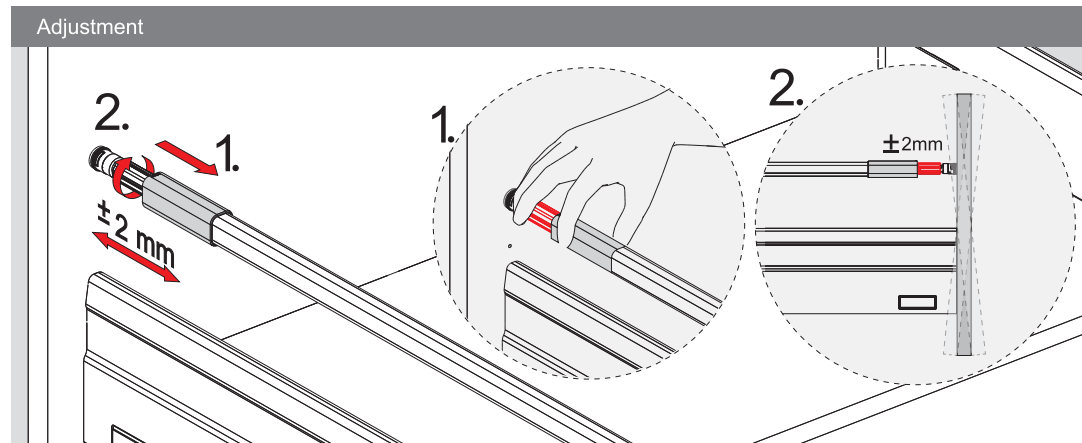

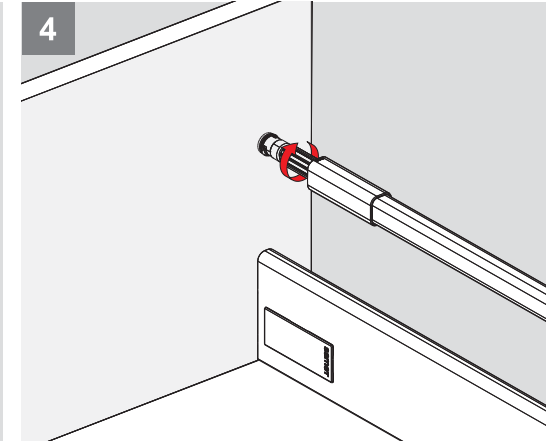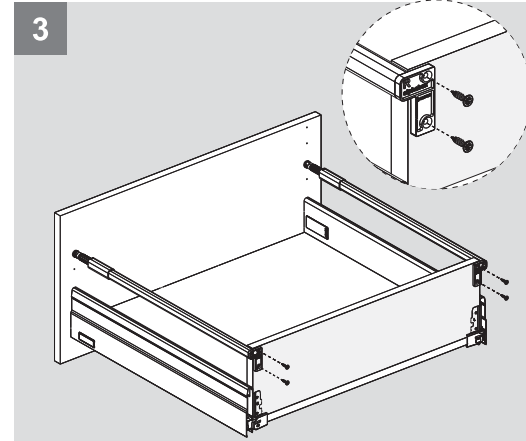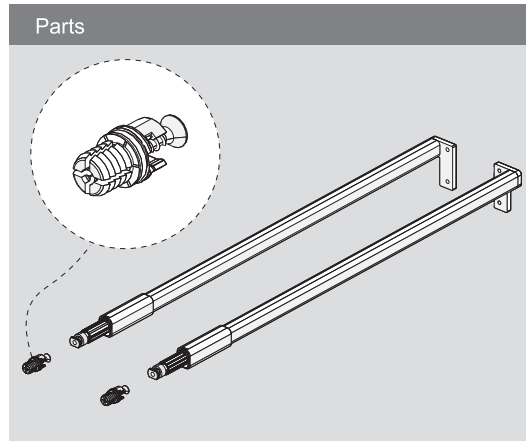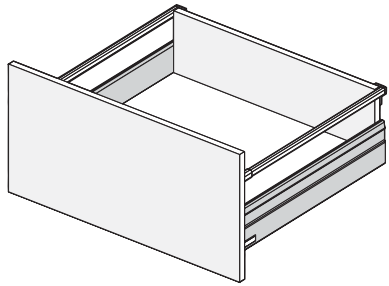

Technical Dimensions

Front Panel

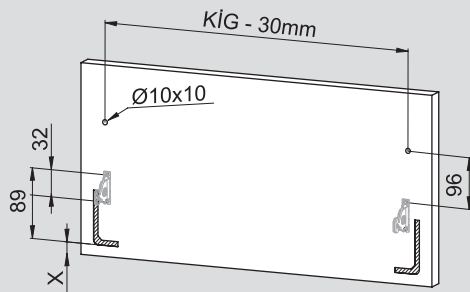

Wooden Backboard

