


Blind Corner Unit Installation Instructions

Inspect all parts and read all instructions prior to beginning assembly and installation.

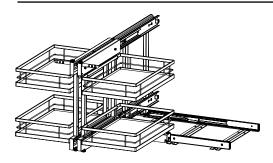

Product Assemblies

BCUS-LR-15-CH

For ease of installation, assemble and install before countertop is installed on cabinets.

Tools Required

- · Phillips Head Screwdriver
- Drill with 1/16" (1.5mm) bit
- Tape Measure

Parts Included


A: Center Slide Assembly (1)

B: Support Feet (2)

F: Basket (4)

C: Front Guide Stop Channel(1) D: Pull Handle (2)























Installation shown for LEFT cabinet openings, reverse instructions for RIGHT cabinet openings.

Attach the support feet (B) to the bottom of the center sliding assembly (A) using 6 - M5 x 8mm (G) screws and 6 - lock nuts (J).

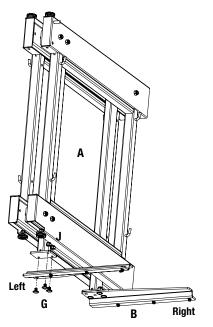


Install screw on pull handles (D).

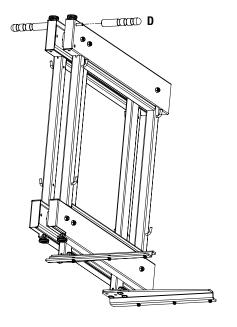


Installation (continued)


Adjust and tighten the position of the bottom guide rollers for either a right- or left-hand unit.

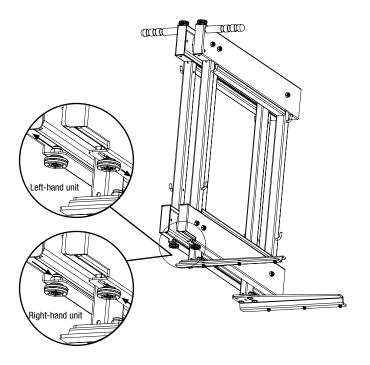


Attach center assembly (A) with feet to the slide base (E) with remaining 6 - M5 x 8mm (G) screws.

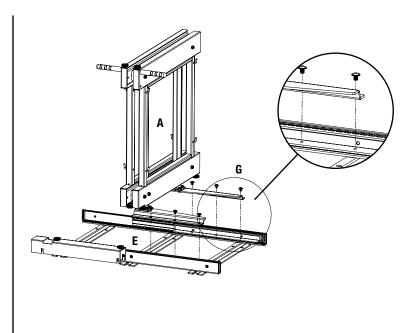


Attach front guide stop channel (C), replacing 2 - short M4 screws with 2 - longer M4 x 8mm (H) screws.

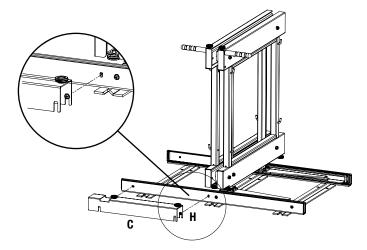


Set front guide stop (**C**) height to allow for proper roller clearance and operation.

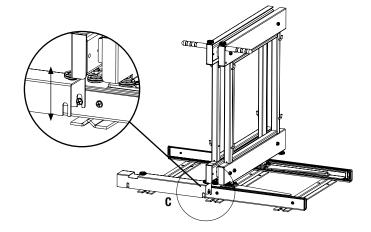

Position and align completed unit in cabinet. Recommended to place completed unit at least 2.5" from side of cabinet and 2.75" from front edge of cabinet. Temporarily place at least one basket (F) on each side of the frame assembly and verify that both baskets will clear the opening when operating the product.

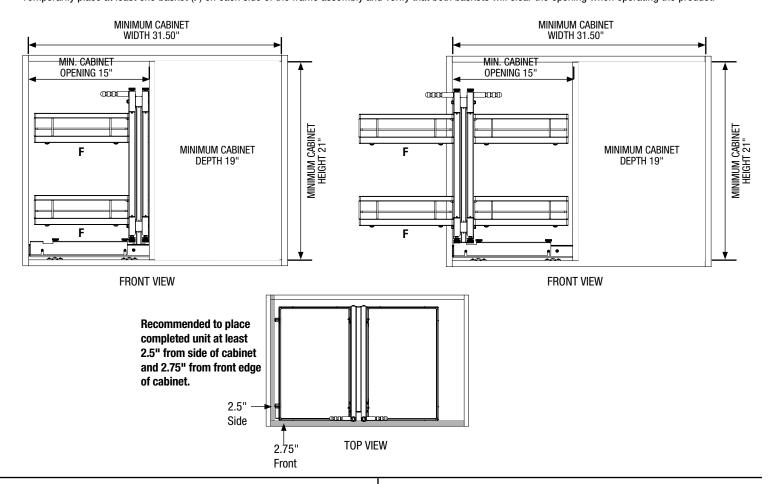

Once final position and proper clearances are confirmed, remove the baskets and install bottom frame to the base cabinet with 12 - ST4 x 14 (I) wood screws through the mounting brackets into the cabinet base.

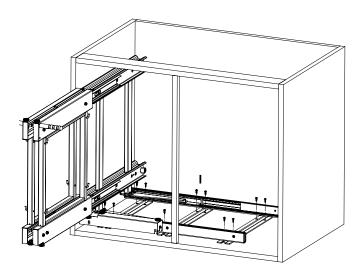

9 Install the 4 - baskets (**F**), 2 on each side of center frame.

